

RCMA423 Series

Digital Ground Fault Monitor / Ground Fault Relay

Grounded and High-Resistance Grounded AC/DC Systems



RCMA423 Series

Ground Fault Monitor / Ground Fault Relay for Grounded AC, DC, and AC/DC Systems



RCMA423

Features

- Ground fault monitoring for AC, DC, and mixed AC/DC systems
- True RMS value measurement (AC + DC)
- Main alarm value, adjustable 30 mA...3 A
- Separate prewarning alarm value, adjustable to 50...100 % of the main alarm
- Frequency range 0...2000 Hz
- 3 separately adjustable time delays: start up, response, and release
- LCD screen with real-time value display
- Latching or non-latching operating mode
- CT connection monitoring
- Power On LED, LED Alarm 1 / 2
- TEST / RESET button, internal / external
- Two separate voltage-free SPDT contacts
- Selectably operates normally energized or normally de-energized
- Continuous self monitoring
- Password protection for device settings
- Sealable transparent cover
- Two-module enclosure (36 mm)

Approvals



Description

The RCMA423 monitors for ground faults in grounded and high-resistance grounded AC (both single- and three-phase), DC, and mixed AC/DC systems. The RCMA423 is specially designed to provide advanced warning of developing ground faults without the problems associated with high sensitivity nuisance tripping.

A digital LCD screen displays real-time measurements of the system's ground fault current. Two separately adjustable SPDT contacts allow for information transmission (such as to a PLC) or power interruption (such as through a contactor or shunt trip breaker).

Since the values are measured with measuring current transformers, the device is nearly independent of the load current and the nominal voltage of the system.

Applications

- Ground fault detection in single- or three-phase AC systems
- Ground fault detection in pure DC or mixed AC/DC systems
- Motors and motor control systems
- Systems with variable frequency drives (VFDs)
- Battery backup systems and other pure DC systems

Function


Once the supply voltage U_S is applied, the startup delay ("t") activates. Alarms during this delay will not cause the RCMA423 to switch over the contacts.

Measurements of the system's ground fault current are taken via an external current transformer. For AC, all phases (including the neutral if one exists) are placed through the current transformer. For DC, both legs are placed through the current transformer. The measured value is indicated in real-time on the device's LCD display.


If the measured value exceeds one or both response values, the respective response delays $t_{on 1/2}$ activate. If the ground fault still exists after the response delays expire, the respective contacts switch over and the alarm LEDs activate. If the device is set to non-latching mode and the ground fault clears, the alarms will clear after the set release time "t_{off}" expires. If the device is set to latching mode, the alarms will not clear until the device is reset manually or the supply voltage is lost. The TEST function allows for an internal operation testing of the device. The device's easy-to-use onboard menu manages all settings via the detailed LCD screen. An optional password protection setting protects unauthorized users from changing settings.

Connection monitoring

The connections between the device and the external current transformer are continuously monitored. If the device detects a connection error, the CT connection monitoring alarm will activate, and the contacts will switch over without delay. After the connection error is cleared, the device will reset based on its latching/non-latching setting.

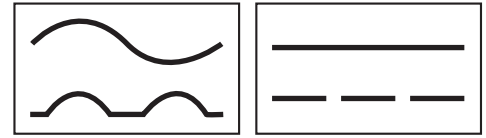


Operating and display elements

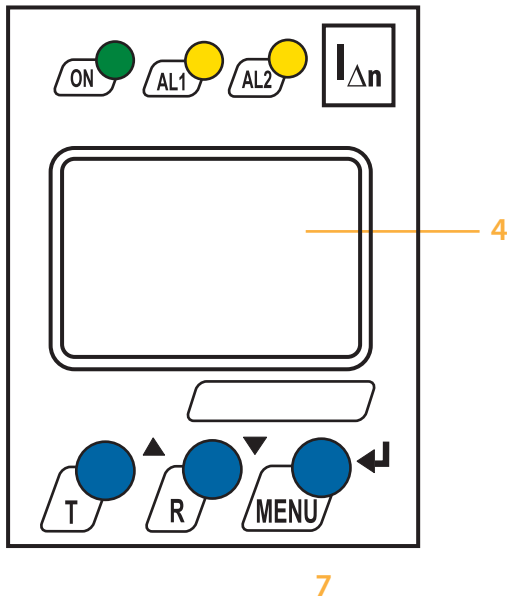

- 1 - Power "ON" LED (green): Illuminates when power is received to the unit. Flashes when the current transformer connection-alarm is active.
- 2 - Alarm LED "AL1" (yellow): Alarm 1, illuminates when the set response value $I_{\Delta n1}$ has been exceeded. Flashes when the current transformer connection alarm is active.
- 3 - Alarm LED "AL2" (yellow): Alarm 2, illuminates when the set response value $I_{\Delta n2}$ has been exceeded. Flashes when the current transformer connection alarm is active.
- 4 - Multi-functional LCD display
- 5 - TEST button: Activates self-test
Arrow up key: Scrolls up inside device's menu
- 6 - RESET button: Resets device
Arrow down key: Scrolls down inside device's menu
- 7 - MENU key: Activates device's internal menu
Enter key: Confirm change inside device's menu
Escape key (held > 1.5 s): Goes back a step inside menu



Wiring diagram

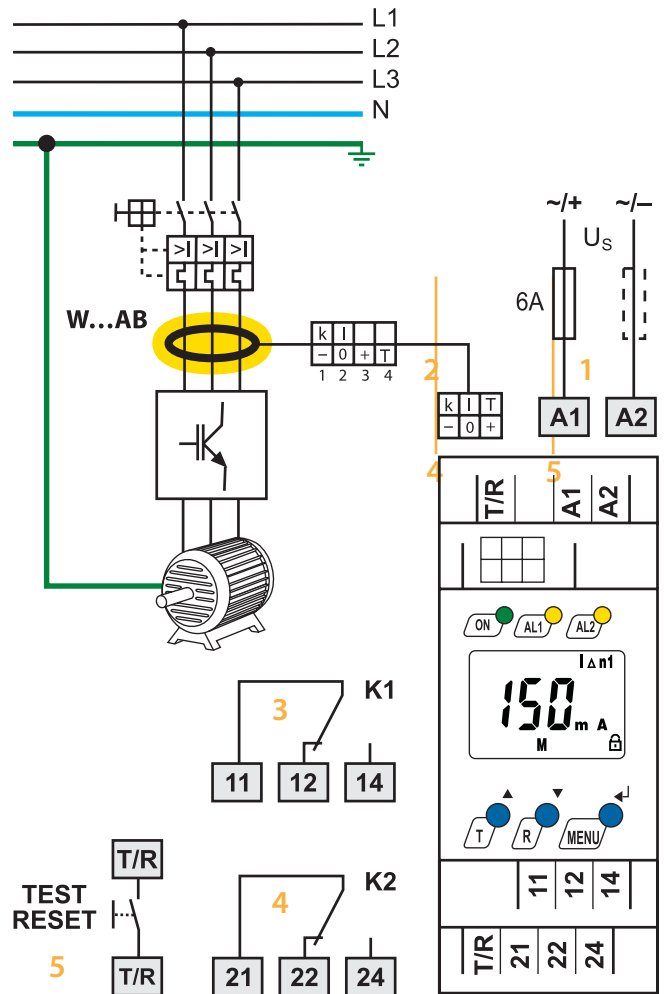

- 1 - External supply voltage used to power device
5 A fuse required for internal short circuit protection
- 2 - Connection to external current transformer. For AC, all phases (including a neutral if one exists) are placed through. For DC, both legs are placed through.
- 3 - Alarm relay K1: $I_{\Delta n1}$ (prewarning).
- 4 - Alarm relay K2: alarm $I_{\Delta n2}$ (alarm).
- 5 - Combined TEST and RESET button:
short depress (< 1.5 s) = RESET,
long depress (> 1.5 s) = TEST.

Note! Do not route the ground conductor through the measuring current transformer when also routing the power conductors!

Wiring diagram: External current transformer

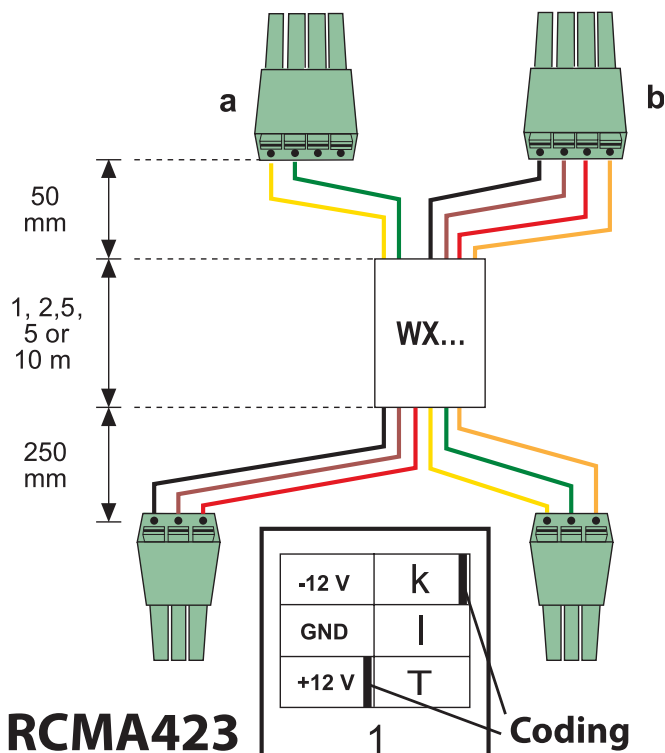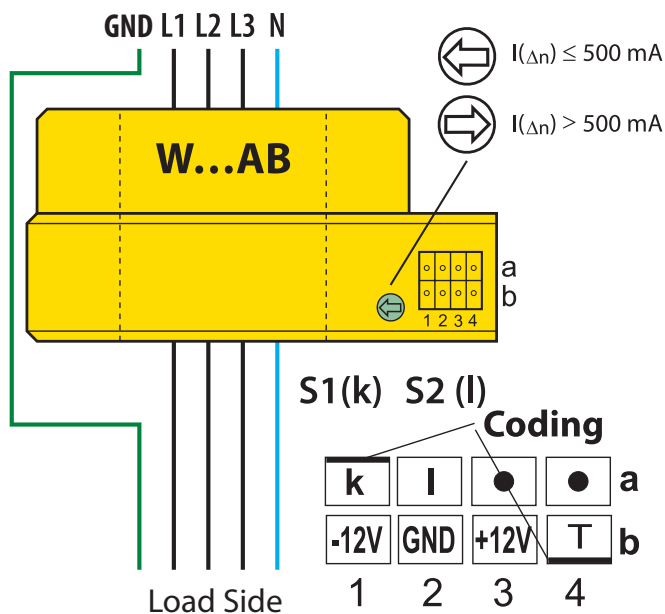


RCMA423

Trip level based on current transformer	
Trip level range	Compatible CT
30 mA...500 mA	W20AB
30 mA...3 A	W35AB, W60AB, W120AB
300 mA...3 A	W210AB

Dimensions

Dimensions in inches (mm)

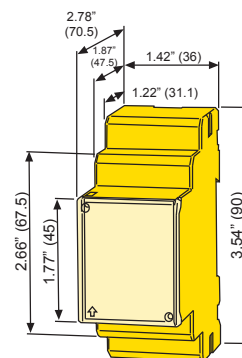

Ordering information: RCMA423

Type	Response range $I_{\Delta n}$	Frequency range	Supply voltage U_S^*	Ordering No.
RCMA423-D-1	30 mA...3 A	0...2000 Hz	DC 9.6...94 V AC 16...72 V (42...460 Hz)	B 9404 3023
RCMA423-D-2	30 mA...3 A	0...2000 Hz	AC/DC 70...300 V (DC, 42...460 Hz)	B 9404 3025

* Absolute values

AC/DC current transformers

Type	Inside Diameter in Inches (mm)	Ordering No.
W20AB	ø 0.75" (20)	B 9808 0008
W35AB	ø 1.35" (35)	B 9808 0016
W60AB	ø 2.25" (60)	B 9808 0026
W120AB	ø 4.7" (120)	B 9808 0041
W210AB	ø 8.25" (210)	B 9808 0040

CT connection cable

Type	Length in ft (m)	Ordering No.
WX-100	3' (1)	B 5111 00033
WX-250	8' (2.5)	B 5111 00032
WX-500	16' (5)	B 5111 00031
WX-1000	32' (10)	B 5111 00034

Accessories

Type	Ordering No.
Mounting clip for RCMA423	B 9806 0008
Snap-on mounting for W20... / W35...	B 9808 0501
Snap-on mounting for W60...	B 9808 0502

(1 unit required for each device)

Technical data

Insulation coordination acc. to IEC 60664-1 / IEC 60664-3

Rated insulation voltage	250 V
Rated impulse voltage / pollution degree	2.5 kV / III
Protective separation (reinforced insulation) between (A1, A2) – (k/I/T/-/GND/+, T / R) – (11, 12, 14) – (21, 22, 24)	
Voltage test according to IEC 61010-1	2.21 kV

Supply voltage

RCMA423-D-1:

Supply voltage U_S	AC 16...72 V / DC 9.6...94 V
AC Frequency Range U_S	42...460 Hz
Power consumption	≤ 6.5 VA

RCMA423-D-2:

Supply voltage U_S	AC/DC 70...300 V
AC Frequency Range U_S	42...460 Hz
Power consumption	≤ 6.5 VA

Measuring circuit

Compatible current transformers	W20AB, W35AB, W60AB, W120AB, W210AB
Rated insulation voltage (current transformer)	800 V
Operating characteristic acc. to IEC 60755	Type B
Rated frequency	0...2000 Hz
Measuring range	30 mA...3 A
Relative uncertainty for $f \leq 2$ Hz or ≥ 16 Hz	0...-35 %
Relative uncertainty for $f < 2$ Hz or < 16 Hz	-35...+100 %
Operating uncertainty	0...35 %

Response values

Rated ground fault operating current $I_{\Delta n1}$ (prewarning)	50...100 % of $I_{\Delta n2}$ (50 %)*
Rated ground fault operating current $I_{\Delta n2}$ (Alarm)	30 mA...3 A (30 mA)*
Hysteresis	10...25 % (15 %)*

Specified time

Starting delay t	0...10 s (0 s)*
Response delay t_{on2} (alarm)	0...10 s (0 s)*
Response delay t_{on1} (prewarning)	0...10 s (1 s)*
Delay on release t_{off}	0...99 s (1 s)*
Operating time t_{ae} at $I_{\Delta n} = 1 \times I_{\Delta n1} / 2$	≤ 180 ms
Operating time t_{ae} at $I_{\Delta n} = 5 \times I_{\Delta n1} / 2$	≤ 30 ms
Response time	$t_{an} = t_{ae} + t_{on1} / 2$
Recovery time t_b	≤ 300 ms

Displays, memory

Display range, measured value AC/DC	0...6 A
Relative percentage error	-17 %...+17 % / ± 2 digit
Measured-value memory for alarm value	data record measured values
Password	off / 0...999 (off)*
Latching behavior	ON / OFF (Latching / Non-latching)

Inputs / outputs

Cable length for external TEST / RESET button	0...32.8 ft (0...10 m)
---	------------------------

Cable lengths for measuring current transformers

WX... connector cable	See ordering information
Alternatively: Single wire 6 x AWG 20 (0.75 mm ²)	0...32.8 ft (0...10 m)

Switching elements

Number of switching elements	2 SPDT contacts
Operating principle	normally energized or normally de-energized(*)
Electrical endurance, number of cycles	10000 switching operations
Contact data acc. to IEC 60947-5-1	
Utilization category	AC-13 AC-14 DC-12 DC-12 DC-12
Rated operational voltage	230 V 230 V 24 V 110 V 220 V
Rated operational current	5 A 3 A 1 A 0,2 A 0.1 A
Minimum contact rating	1 mA at AC / DC ≥ 10 V

Environment / EMC

EMC	IEC 62020
Operating temperature	-25 °C...+55 °C
Climatic class acc. to IEC 60721	
Stationary use (IEC 60721-3-3)	3K5 (except condensation and formation of ice)
Transport (IEC 60721-3-2)	2K3 (except condensation and formation of ice)
Storage (IEC 60721-3-1)	1K4 (except condensation and formation of ice)
Classification of mechanical conditions IEC 60721	
Stationary use (IEC 60721-3-3)	3M4
Transport (IEC 60721-3-2)	2M2
Storage (IEC 60721-3-1)	1M3

Connection

Connection	screw terminals
rigid / flexible	AWG 24...12 / 24...14
Multi-conductor connection (2 conductors with the same cross section)	
rigid / flexible	AWG 24...14 / 24...14
Stripping length	8...9 mm
Tightening torque	0.5...0.6 Nm

Other

Operating mode	continuous operation
Position of normal use	display-oriented
Degree of protection, internal components / terminal (IEC 60529)	IP30 / IP20 (NEMA 1)
Enclosure material	polycarbonate
Flammability class	UL94V-0
DIN rail mounting acc. to	IEC 60715
Screw mounting	2 x M4 with mounting clip
Standards	IEC 62020
Firmware version	D330 V1.0x
Operating manual	TGH1442
Weight	≤ 150 g

()* Factory setting



USA • Coatesville, PA
Toll-Free: 800-356-4266 • Main: 610-383-9200
Fax: 610-383-7100 • E-mail: info@bender.org



Canada • Mississauga, ON
Toll-Free: 800-243-2438 • Main: 905-602-9990
Fax: 905-602-9960 • E-mail: info@bender-ca.com

bender.org • bender.org/mobile